

Table of Contents

1. INTRODUCTION	1-1
1.1. Overview.....	1-1
1.2. New THERM Features.....	1-2
1.2.1. New General Features	1-2
1.2.2. New Drawing Features	1-2
1.2.3. New Calculation Features	1-2
1.3. THERM Components	1-3
1.3.1. The THERM Graphic User Interface.....	1-3
1.3.2. Heat-Transfer Analysis.....	1-3
1.3.3. Results	1-4
2. INSTALLATION	2-1
2.1. Computer Requirements.....	2-1
2.2. Installing the Program.....	2-1
3. QUICK START	3-1
3.1. Draw Cross Section and Select Materials.....	3-1
3.2. Drawing Features.....	3-2
3.3. Materials	3-4
3.4. Insert Glazing System	3-5
3.5. Adding a Custom Spacer.....	3-6
3.6. Specify Boundary Conditions.....	3-8
3.7. Run Simulation and View Results	3-9
3.8. THERM's Advances in Modeling.....	3-10
3.9. Toolbar Reference Table.....	3-11
3.10. Other Shortcuts	3-12
4. GETTING STARTED	4-1
4.1. The Main Screen.....	4-1
4.1.1. Cursor Feedback Bar	4-2
4.2 Main Menu.....	4-3
4.2.1. Pull-down Lists	4-4
4.2.2. THERM Files.....	4-4
5. DRAWING CROSS-SECTION GEOMETRY	5-1
5.1. Overview of Drawing a Cross Section	5-1
5.2. Importing a DXF or Bitmap File as an Underlay.....	5-1
5.2.1. Select Underlay from the File menu.....	5-2
5.2.2. Select DXF or Bitmap File	5-2
5.2.3. DXF File Conversion	5-6
5.3. Drawing Features.....	5-7
5.3.1. Sticky Distance	5-7
5.3.2. Drawing Preferences	5-7
5.3.3. Snap Settings.....	5-8
5.3.4. Zoom	5-10
5.3.5. Voids and Overlaps	5-11

5.3.6. Other Drawing Features.....	5-12
5.4. Drawing Using a Mouse.....	5-13
5.4.1. Suggestions for Drawing Cross Sections	5-15
5.5. Drawing Using the Keyboard (Numeric Cursor Positioning).....	5-17
5.6. Editing Polygons.....	5-18
5.6.1. Selecting a Polygon	5-18
5.6.2. Moving a Polygon	5-20
5.6.3. Deleting a Polygon	5-21
5.6.4. Moving a Point.....	5-21
5.6.5. Moving a Line.....	5-22
5.6.6. Adding a Point	5-23
5.6.7. Deleting a Point.....	5-24
5.7. Flip and Rotate	5-24
5.7.1. Flip.....	5-25
5.7.2. Rotate	5-26
5.8. Fill Void.....	5-27
5.9. Inserting a Glazing System.....	5-29
5.9.1. Inserting a WINDOW4 Glazing System.....	5-29
5.9.2. Condensation Index.....	5-34
5.9.3. If the WINDOW4 Glazing System Doesn't Fit.....	5-37
5.9.4. Inserting Multiple WINDOW4 Glazing Systems.....	5-37
5.9.5. Information about the Glazing System	5-37
5.10. Assigning Materials After Drawing Polygons	5-38
5.10.1. Use the Material pull-down list to the right of the toolbar:	5-38
5.10.2. Access the Properties for Selected Polygon(s) dialog box:	5-39
5.10.3. Solid Materials	5-40
5.10.4. Frame Cavities	5-40
5.11. Defining New Materials	5-41
5.11.1. Solid Materials Type.....	5-43
5.11.2. Frame Cavity.....	5-44
5.11.3. Glazing Cavity	5-46
5.11.4. External Radiation Enclosures	5-46
5.11.5. Making Custom Material Libraries	5-49
5.12. Creating a Component Library	5-50
5.13. Importing a FRAME™ F30 ⁽³⁾ File.....	5-50

6. DEFINING BOUNDARY CONDITIONS 6-1

6.1. Overview of Boundary Conditions	6-1
6.2. Assigning Boundary Condition Definitions	6-1
6.2.1. Generate Boundary Conditions	6-1
6.2.2. Automatic Check of Geometry Definition	6-2
6.2.3. Reassign Boundary Conditions	6-3
6.2.4. Define U-factor Surface Tags	6-6
6.3. Error Detection in THERM	6-8
6.3.1. Finding and Fixing Bad Points.....	6-9
6.3.2. Finding Voids and Overlaps	6-12
6.4. Defining New Boundary Conditions.....	6-12
6.5. Special Boundary Condition Cases.....	6-15
6.5.1. Frame Cavities with Detailed Radiation Model	6-15
6.5.2. External Radiation Enclosures	6-17

7. CALCULATING RESULTS 7-1

7.1. Overview of THERM Calculation Methods.....	7-1
7.2. Calculations.....	7-1

7.2.1. Calculation Menu	7-1
7.2.2. Calculating Results for a THERM file.....	7-3
7.2.3. Calculation Options.....	7-4
7.3. Feedback and Troubleshooting During the Calculation Process.....	7-7
7.3.1. Premeshing	7-8
7.3.2. Reading Geometry.....	7-9
7.3.3. Meshing	7-9
7.3.4. Generating Input	7-9
7.3.5. Simulating.....	7-9
7.3.6. View Factors (optional)	7-9
7.3.7. Simulating (optional).....	7-10
7.3.8. Preparing Input (optional).....	7-10
7.3.9. Error Estimator (optional).....	7-10
7.4. Viewing the results	7-10
7.4.1. U-factors.....	7-11
7.4.2. Min/Max Temperature.....	7-14
7.4.3. Temperature at Cursor.....	7-14
7.4.4. Average Temperature with Tape Measure	7-15
7.4.5. Graphic Results	7-17
7.4.6. Finite-Element Mesh	7-18
7.4.7. Isotherms	7-19
7.4.8. Flux Vectors.....	7-20
7.4.9. Color Infrared	7-21
7.4.10. Color Flux Magnitude	7-22
7.4.11. Report	7-23
7.4.12. Export to WINDOW.....	7-26
8. TUTORIAL	8-1
8.1. Tutorial Organization.....	8-1
8.2. Start THERM	8-2
8.3. Draw the Frame Cross-Section Geometry.....	8-3
8.3.1. Import Underlay with Autoconvert On.....	8-3
8.3.2. Tracing a DXF Underlay	8-7
8.3.3. Using a Dimensioned Drawing	8-13
8.4. Import a Glazing System from WINDOW 4.....	8-21
8.5. Define Boundary Conditions	8-31
8.6. Run and View the Results	8-34
9. REFERENCES	9-1
10. ACKNOWLEDGEMENTS	10-1
Appendix A: Glossary of Terms	A-1
Appendix B: Error Messages	B-1
Appendix C: Theoretical Background	C-1
Index	I-1